

BORGOO



搅拌机
BG-301S

使用说明书

www.borgoo.com

佛山市首冠电器有限公司

地址：广东省佛山市南海区里水镇邓岗北隅村西门工业区北面1号厂房
香港办公地址：香港长沙湾长裕街10号利行工业大厦1楼108室

Foshan Shouguan Electrics Co., Ltd.

ADD : No.1 North, Ximen Industrial Zone, Beiyu village, Denggang, Lishui town, Nanhai District, Foshan City, Guangdong Province, China

HK ADD : Unit108,1/F, Lee Hang Industrial Building, 10 Cheung Yue Street, Cheung Sha Wan, kowloon, HK

TEL : 400-8898-258 86-0757-85613883

FAX : 86-757-85668572

目录

1	产品简介
1	产品特点
2	构件说明
2	注意事项
4	操作指南
6	清洁及保养
6	疑难解答
7	技术规格参数
7	实验依据标准
8	英文版说明书

产品简介

感谢您的选择，欢迎光临博格利佳。BG-301S 多功能搅拌机，适合制作牛奶饮料，果汁等。带有刻度标识的玻璃杯能够方便观察杯内容量。产品占用的空间比大多数厨房用品都要小，使用后，无须储藏，让您爱不释手。

您可以根据个人口味制作喜爱的各类果蔬饮料，希望这款产品能为您带来更多的享受。

产品特点

- 1、优质不锈钢材质机身，美观耐用。
- 2、产品选用进口无毒塑胶材质，不含BPA，符合美国FDA和德国LFGB标准。
- 3、1500ml带刻度标识超大容量搅拌杯，采用高强度加厚玻璃材质，保持整个搅拌过程可视、低噪音运行。
- 4、玻璃杯组360度任意角度置入机身，提放免对位，使用更方便。
- 5、加硬不锈钢四叶刀片，独特角度，搅抖更高效
- 6、500W大功率马达，电子无级调速，带点动功能，适合更多食材的料理
- 7、人性化可拆卸易清洗结构，所有分离的部件可用洗碗机清洗。
- 8、特有吸盘式脚垫，产品工作时更稳定可靠。

构件说明



注意事项

使用BG-301S搅拌机之前，请仔细阅读本说明书并妥善保管，以供日后参考。

危险

1. 切勿让水、其它液体、易燃性清洁剂进入产品内部，以免发生触电和（或）火灾。
2. 切勿用水、其它液体、易燃性清洁剂来清洁产品内部，以免发生触电和（或）火灾。
3. 在清理或拆卸搅拌刀时，刀片非常锋利，请格外注意防止刮伤。

警告

1. 在将产品接通电源以前，首先确认产品底部所标示的电压是否与当地的电压相符。否则可能导致产品损坏。
2. 请保持电源线完好。电源线请勿割伤、损坏、过度弯曲、拉扯、扭转、打结、或靠近高温处。并请勿压上重物、挤压、或重新自行组装。否则，电源线损伤，会导致短路、着火
3. 电源线、插头损伤时或插座松动时，请勿使用。否则，会有造成触电、短路、起火的危险。
4. 请勿让肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人（包括儿童）单独接触或使用本产品，否则会导致触电和机械危险。
5. 请勿用湿的手插拔电源插头。否则，会有触电、受伤的危险。
6. 产品在无人使用时和拆装，清洗前请拔掉搅拌机的电源插头。
7. 起动产品前需确认上盖有正确安装，产品使用过程中，请勿打开上盖。
8. 请不要把产品机身直接置入任何液体中。
9. 请勿堵塞排风口，否则影响产品使用寿命。
10. 玻璃杯内不可直接注入开水，以免损坏玻璃杯。

注意

1. 本产品仅限于家用。请勿在户外使用本产品。
2. 请在干燥、稳固、平整且水平的表面上放置和使用本产品。避免发生意外。
3. 切勿在产品顶部放置任何物品，也不要坐在产品上，以免产品受损。
4. 请勿用硬物敲击本产品，以免产品受损。
5. 使用之后和清洁产品前，务必先将电源插头拔掉。以避免发生触电和机械危险。
6. 玻璃杯内勿放入刀、叉等金属物品，以免损坏产品。
7. 放入玻璃杯内搅拌的食材，不可以超过玻璃杯最高水位指示1500ml。
8. 倘若发生故障，应立即拔掉电源插头，切勿将有缺陷的产品置于工作状态。
9. 请勿将防滑脚置于易发生化学反应的表面上，某些油漆或合成纤维表面可能与防滑脚材料发生反应并使之软化，这会使表面留有污渍。
10. 请勿擅自拆卸或维修产品。为避免危害，产品需要维修时，请咨询博格利佳客户服务中心，由制造厂或指定维修中心维修。

操作指南

首次使用:

 
1. 清点随机附件和资料, 仔细阅读使用说明书并保存以备日后查阅。
2. 移除所有包装, 用柔软干布清洁所有可拆解部件、产品内腔后, 将其组装好。(请参考清洁、安装及拆卸指南)。
3. 把产品放在干燥、稳固、平整且水平的平面上。
4. 检测电源、插座等, 确认符合产品“使用说明书”的要求, 然后插入插座。
5. 在第一次使用前, 使用温水和几滴清洁剂, 彻底地清洁玻璃杯, 上盖和加料杯。

使用方法:


1. 把滑动开关设置到“关”位置。
2. 在玻璃杯中加入适量的食材, 把带有加料杯的上盖安装在玻璃杯上。



3. 上盖弧形凸出部位必须盖住玻璃杯出水口。

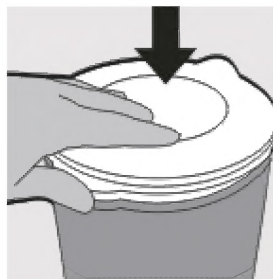

 4. 把玻璃杯放到机身上。注意: 上盖和玻璃杯安装到位后才能使用产品。

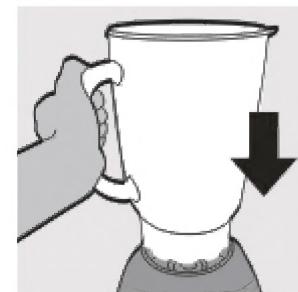

5. 插上电源。
6. 把滑动开关移动到“开”的位置, 按点动键运转产品或是移动滑动开关到以下位置:

点动 = 以全速运行

低速 = 以慢速运行

高速 = 以快速运行

关 = 关闭

开 = 起动 (配合点动开关使用)

在搅拌的时候, 如果想增加其他的材料, 请逆时针旋转并移开加料杯。如果玻璃杯已经很满, 在移开加料杯前, 把滑动开关调到“关”位置, 因为搅拌机运行的速度很快, 会导致果汁从加料孔溢出。

7. 搅拌机运行2分钟后, 请关掉电源。让机器冷却4分钟后, 才能再使用。这样可以延长产品使用寿命。
8. 当饮料达到要求时, 请把滑动开关调到“关”位置, 搅拌机处于关闭状态。
9. 只有当刀片完全停止时, 才能移开玻璃杯。

清洁及保养

注意：

- 切勿将本产品机身浸入水中或任何其它液体中
- 切勿使用具有腐蚀性或易燃性的清洁剂（例如漂白剂或酒精）清洁本产品的任何部件。

机身的清洁：

1. 清理：

危险：使用完后，请拔掉电源插头。产品在拆装或清洗前请拔掉搅拌机的电源插头。

注意： 请不要使用有腐蚀性或磨损性的物品。

2. 清理机身：

危险：请注意不要让产品浸入水或其他液体中，以免触电。

如果有必要，用布擦拭产品时，也可以使用几滴清洁剂。

3. 清理玻璃杯：

危险：刀片非常锋利，清理时，请格外注意。

把玻璃杯从主体上移开，打开上盖，用水冲洗玻璃杯、上盖、加料杯。清洗后，用布擦干，在组装前，请擦干所有部件，以免发霉。

4. 处理：

本款产品的包装材料是可以循环利用的。请根据当地回收规定处理这些材料。如果由专业公司拆装，机器组成部件可以循环利用。马达请不要随意丢弃，请根据当地化学垃圾处理规定处理搅拌机。

疑难解答

序号	现象	解决方法
1	不工作	检查总线插头与插座是否接触良好。 查看玻璃杯是否正确安装。
2	刀片运转很慢	查看是否玻璃杯内食材太满或不适合。 关闭产品，拔掉电源，用刮铲清除阻塞刀片组件的食材，同时，建议您减少食材加工量，或把食材切成小块，再放入玻璃杯中搅拌。
3	产品在使用时有轻微的异味	新产品最初几次使用时有轻微的异味是正常现象，使用几次后异味会很快减淡。
4	搅拌杯中可否加入沸腾的液体	需要让液体冷却到摄氏60度以下再加入，以免损坏玻璃杯
5	可拆卸部位可否用洗碗机清洗	除了机身[E]之外，所有的部件都可以用洗碗机清洗。

注：故障种类与常见问题包括但不限于以上几种，如果问题仍然存在，或又出现其它问题，请与售后服务中心联系，以取得帮助。

技术规格参数

型号	BG-301S
电压（V）	AC~220
频率（Hz）	50
触电保护等级	I
转速（rpm）	3000-20000
功率（W）	500
容量（ml）	1500
尺寸（mm）	L 185XW155XH400
重量（kg）	3.75

产品执行标准：

☆GB 4706.1-2005 家用和类似用途电器的安全第1部分：通用要求

GB 4706.30-2008家用和类似用途电器的安全 厨房机械的特殊要求

☆本产品按家用标准设计制造，请勿商用或工业用途。

CONTENTS

9	Product Features
10	Parts Construction
11	Cautions
12	Operation Guide
15	Cleaning and Maintenance
16	Problem shooting
17	Product Specification
17	Applicable Standards

Product Introduction:

Thank you for your purchase and selection and welcome to visit Borgoo enterprise. BG-301S multi-function mixer, suitable for making milk drinking and juice. The glass jug with level mark to help you measure the quantity. With its small size, you have no need to store up it. You will enjoy it to your heart.

You can make kinds of drinking according to your taste.

Product Features

1. High-quality stainless steel body, attractive and durable.
2. Using no-toxic plastic material, having no BPA and USA FDA and Germany LFGB certifications.
3. 1500ml mixer jug with level marks, adopting high-strength glass to help you watch the whole mixing process without noise.
4. Glass jug can place into body in any 360degree rotation, easy for placing and using.
5. Hardened stainless steel four-leaf blades with special angle to get high efficiency in mixing.
6. with 500W motor, in electronic step less speed , suitable for more kinds of cooking.
7. Human-friendly removable and easy cleaning construction suitable for dish-washer to clean.
8. With special suction-foot-style mat, easy for usage.

Parts Construction



Caution:

Before using the Mixer, please read the manual carefully and keep for future reference.

Danger:

1. Do not immerse the power cord, plug or machine into water or any other liquid to avoid any damage caused by electric shock.
2. Do not use water or any other liquid to clean this machine to avoid any damage caused by electric shock.

Cautions:

1. Before plug in ,please make sure the voltage indicated on the product bottom is consistent with local voltage to avoid damage to the product.
2. Please keep the power cord intact. Power cord should not be cut, damaged, excessively bent, pulled, twisted, knotted, or close to heating area, and it should not be pressured or compressed or self-assembled, Otherwise, the damaged power cord will cause short circuit or fire.
3. When power cord, plug or socket get loose, do not use. Otherwise, it will cause electric shock, short circuit and fire.
4. Do not let people with physical disabilities, or with sensory & mental disorders or lack of related experience & knowledge (including children) private access to or use of this product. Or there will be risk of electric shock.
5. Unplug after usage
6. Please check whether upper cover is placed correctly before operation. Do not open it during working
7. Do not immerse main body into any liquid
8. Do not to unplug with wet hands to avoid electrical shock.
9. Do not block air vent to assure longer usage life.
10. Do not pour boiling water into glass jug to avoid damage.

Attentions:

1. This product is intended for household but not outdoors.
2. Put product on the dry, flat and firm surface to use and avoid the accident.
3. Do not put any things above the product or sit on it to avoid any damages.
4. Do not use hard things to block product to avoid any damages.

5. Make sure to unplug the product after usage or before cleaning to avoid electrical shock.
6. Do not put any knife or metal things into glass jug.
7. Food ingredients put into the glass jug should not over the highest water-level of 1500ml.
8. Make sure to unplug the product if there are malfunctions. Do not use the damaged product.
9. Do not place the anti-slip foot on the surface prone to have chemical reaction. Some paint or synthetic materials may have reaction with anti-slip foot and soften it and stain the anti-slip foot surface.
10. Not attempt to disassemble or repair products. If the product needs repair, to avoid injury, please contact customer service center, for repair by manufacturer or designated service.

Operation Guide:

First usage:

Read the instructions carefully and keep for future reference before using this product.

Remove all the packages, clean all the removable parts and inner with soft dry cloth and then assemble it.(please make reference to Cleaning, Assemble and Disassemble guides).

Put product on the dry,flat and firm surface.

Check the power to make sure the machine is in accordance with "Instruction" demands.

 
Before the first usage, move the slid switch to "high-speed" position, and use warm water and drops of cleaners to clean the glass jug, upper cover and feeding cup. All the parts are water-proof.

Usage:


1. Move the slid switch to "off" position.
2. Put moderate food into glass jug and place the upper cover with feeding cup on the glass jug.



3. Must cover up glass jug water-outlet in the arc protruding part.

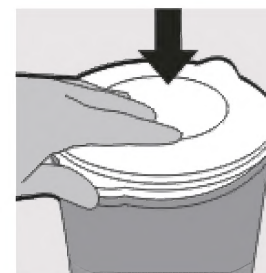

 4. Put glass jug onto the body. Attention: Only can be used after upper cover and glass jug placed correctly.

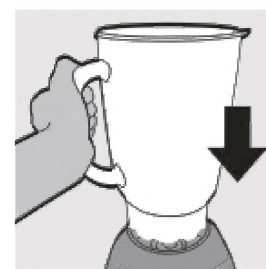

5. Plug in.

Move slide switch to the “on” position. Press Point switch to operate or move slide switch to these positions:

Point switch= operate in full speed

Low speed= operate slow

High speed= operate quick

Off= power off

On= operate (together with Point switch).

6. If want to add other ingredients in the process of mixing, please rotate and remove feeding cup in counterclockwise. If glass jug is full, please move slide switch to “off” position before removing feeding cup to avoid juice overflow from the feeding cup hole in the process of mixing.

7. Please unplug after 2 minutes’ operation. Only after 4 minutes’ cool down can be used again. This can assure longer usage life.

8. When juice met your demands, please move the slide switch to “off” position. Mixer is power-off .

9. Only can remove the glass jug after blades are stopped totally.

Cleaning and Maintenance

Attention:

Do not immerse the machine into water or any other liquid.

Do not use any corrosive or flammable cleaning agent(such as bleach or alcohol) to clean any part of the product.

Body cleaning:

1.Cleaning:

Danger: Please make sure product is power-off after the usage.

Attention: Do not use any corrosive or abrasive items.

2. Body cleaning:

Danger: Do not immerse product into water or other liquid to avoid electrical shock.

If necessary, can use some drops of cleaning agents to clean product.

3. Glass jug cleaning:

Danger: Blade is very sharp. Please pay more attention in cleaning them.

Remove glass jug from main part, open the upper cover, wash the glass jug cover, upper cover, feeding cup. Please dry all the parts with cloth before assemble them to avoid must.

4. Treatments:

All the packages are recycled. Please disposal these packages according to local recycling regulations. If the parts are disassembled by the professional company, all the parts are recycled. Do not thrown away the motor at random, please deal with the mixer according to the local chemical waste disposal regulations.

Problem shooting:

NO.	Problems	Solution:
1	Not working	Check whether plug is accordance with outlet. Check whether glass jug is placed correctly
2	Blade operate slow	Check whether glass jug is too full or some food ingredients block the blades, use the spade to remove the items block blades, and cut food into small pieces before added into glass jug
3	Product has some odor when using	It is normal when there is some odor in the first usages. Odor will disappear after periods of time.
4	Whether can add boiling liquid when mixing	Only after the liquid temperature is bellowing 60 degree can be added into glass jug.
5	Whether removable parts can be washed by dish-washer	Except main part, all the parts can be washed by dish-washer.

The above problems are normal ones but not limited, if there are other problems, please contact with service-center to get the advice and help.

Product Specification

Model	BG-301S
Voltage (V)	AC~220
Frequency (Hz)	50
Electric shock protection class	I
Speed(r/m)	20000rpm
Power (W)	500
Capacity	1500ml
Measures (mm)	L185XW155XH400
Weight (kg)	3.95

Applicable Standards

GB 4706.1-2005 household or similar household appliance Safety Part 1

GB 4706.30-2008 household or similar household appliance Safety and particular kitchen machine demands

This product is designated according to household standard, not for commercial or industrial purposed.